





Field Assembled Optical Fiber Fast Connector Operating Instructions

LC Round Cable Operation Steps

1 - Insert Cable into Screw Cap

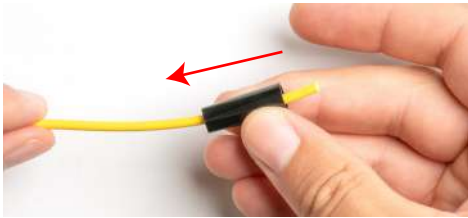

2 - Cutting Length

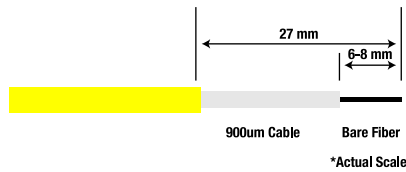


3 - Strip the Outer Jacket 50 mm
(Use JIC-375 Fiber Stripper)



4 - Strip 900um Buffer Coating



5 - Remove Acrylate Coating

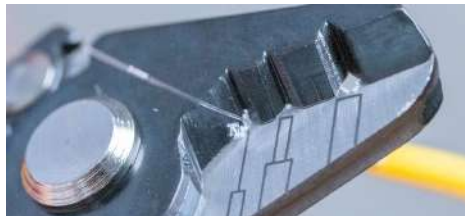


6 - Clean Fiber with FW-5 Fiber Wipes



7 - Fix Length & Cleave Fiber
(Use FC-600 Fiber Cleaver)




8 - Insert Fiber into Connector

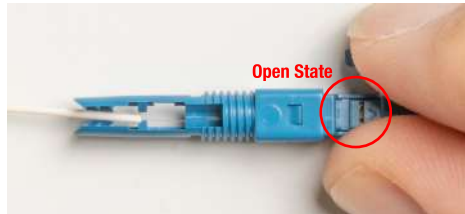

9 - Insert Fiber until it's Slightly Bending



10 - Lock the Fiber

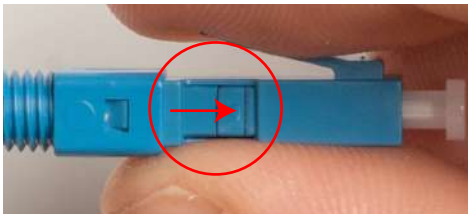


Push the Open Key Forward to Fix the Fiber in Place

11 - Screw Cap on Securely



12 - Trim Strength Members
(Use JIC-186 Cutting Shears)

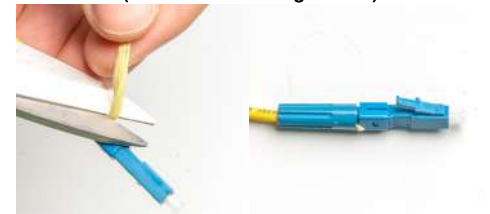


LC 0.9 mm Round Cable Operation Steps

1 - Insert Cable into Screw Cap



2 - Cutting Length

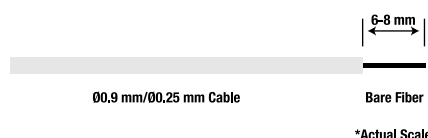


3 - Insert Cable into 0.9 mm Tail Cover



4 - Strip 900um Buffer Coating 50 mm
(Use JIC-375 Fiber Stripper)



5 - Remove Acrylate Coating

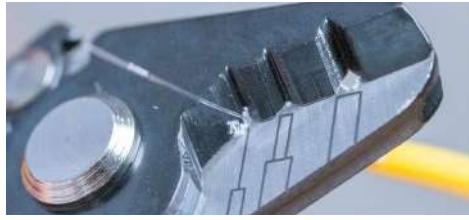

6 - Clean Fiber with FW-5 Fiber Wipes




7 - Fix Length & Cleave Fiber
(Use FC-600 Fiber Cleaver)



8 - Insert Fiber until it's Slightly Bending



9 - Lock the Fiber

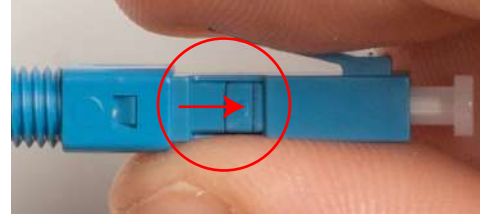

Push the Open Key Forward to Fix the Fiber in Place

10 - Screw Cap on Securely



11 - Complete the assembly

